

## MANUAL


 
### WARNING LIGHT - LED LIGHT HEAD

**RED** = +VDC (FUSE@3.5A)  
**BLACK** = - TO CHASSIS GROUND  
**BLUE** = FOR PATTERN ADVANCE AND SYNC  
**WHITE** = FOR DIM FUNCTION  
**GREEN** = FOR TURN SIGNAL OR STEADY FUNCTION  
**YELLOW** = TO +VDC (FUSE@3.5A) FOR SECOND COLOR.  
 (ONLY DUAL COLOR LIGHTHEAD HAS YELLOW WIRE)

- For dual color lighthouse flashing:
  - Apply RED and YELLOW wire to +VDC together, two colors will flash alternatively.
  - Two colors and dual color can be set to different flash and directional pattern.
- For flash pattern:
  - Momentarily apply BLUE wire to +VDC, the flash pattern will advance to next one.
  - Apply BLUE wire to +VDC for 3-5 seconds, the flash pattern will reset to pattern 1.
- For synchronization:
  - Connect BLUE wire of all lighthouses together. All lighthouses should be set at the same flash pattern.
- For simultaneous or alternative flash:
  - Apply BLUE wire to +VDC for 7 seconds to enter grouping mode.
    - one LED flash - Group 1 (Default)
    - two LED flash - Group 2
  - Lighthouses in the same group flash simultaneously.
  - Lighthouses in different group flash alternatively.
  - Turn off the power to save and exit the grouping mode, the flash pattern and directional pattern will reset to pattern 1.
- For dim function:
  - Apply WHITE wire to +VDC, light intensity down to 60% for night time driving. (This function only effect on flash pattern 1-10)
- For turn signal or steady function:
  - Apply GREEN wire to +VDC, directional pattern will initiate and override original flash pattern.
  - Momentarily apply BLUE wire to +VDC, while GREEN wire on, the directional pattern will advance to next one.
  - When multiple lighthouses sync together and set in flash pattern 1 or 2, the flash speed will temporary change if part of lighthouses turn on the turn signal function.

#### FLASH PATTERNS #

1	Single flash (R65)	14	Split single fast
2	Double (R65)	15	Slit quad fast
3	Single (SAE) (CAT13)	16	Split single turbo
4	Double (SAE)	17	Split double turbo
5	Quad (SAE)	18	Split combo
6	Single fast	19	Random
7	Double fast	20	Running 1
8	Quad fast	21	Running 2
9	Quad fast continue	22	Running 3
10	Combo	23	Running 4
11	Split single	24	Running combo
12	Split double	25	Steady half flash
13	Split quad	26	Steady burn

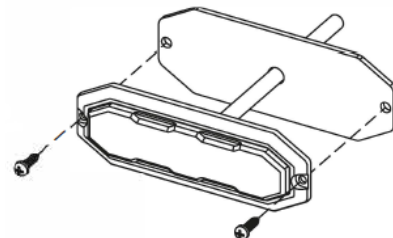

#### DIRECTIONAL PATTERNS #

1	Right 1	4	Left 2
2	Right 2	5	Steady burn
3	Left 1		

Part no. 850135HP-A  
 850135HP-B  
 850130HP-A

Contact us if you need support: [support@strands.se](mailto:support@strands.se) or +46(0)320-450450



[www.strands.se](http://www.strands.se)  
[www.strandseurope.com](http://www.strandseurope.com)